

FITTING INSTRUCTION FOR BGM BOARD

Install the SLE1014 BGM volume board in a suitable place in the machine.

Disconnect the volume control from the SLE1026 board TB4.

Reconnect the volume control to the SLE1014 board CON3 master 4-way screw down connector.

**Insert the 3-way harness into CON7 of the SLE1014 board.
Connect the RED wire to TB2 17V pin on the SLE1026 board.
Connect the ORANGE wire to TB1 video pin 2 on the SLE1026 board.
Connect the BLACK wire to TB1 video pin 1 on the SLE1026 board.**

**Insert the 4way harness into CON4 of the SLE1014 board.
Connect the other end to TB4 on the SLE1026 board.**

**When a bgm song is played the SLE1014 board will automatically activate
Allowing the volume to be controlled via the SLE1014 board.**

**When in the BGM mode POT'S 3 and 4 take over the function of the remote
master volume control.**

**If a second amplifier (slave) is installed in the machine with it own remote volume control,
this volume control will be switched out in the BGM mode and replaced by POT'S 1 and 2.**

**I.E. POT'S 3 and 4 control the master amp volume in the bgm mode.
POT'S 1 and 2 control the slave amp volume in the bgm mode.**